ONEPOINTE SOLUTIONS

PRESENTS

PRODUCT INSTRUCTIONS




HOW TO GUIDES TO SUCCESSFULLY AND EFFICIENTLY
INSTALL OUR PRODUCTS


BOLT TOGETHER TABLE



STEP 1.

Lay top frame upside down and attach leg assemplies using four 1/4-20 x 0.5" screws per leg. There are left and right assemblies.

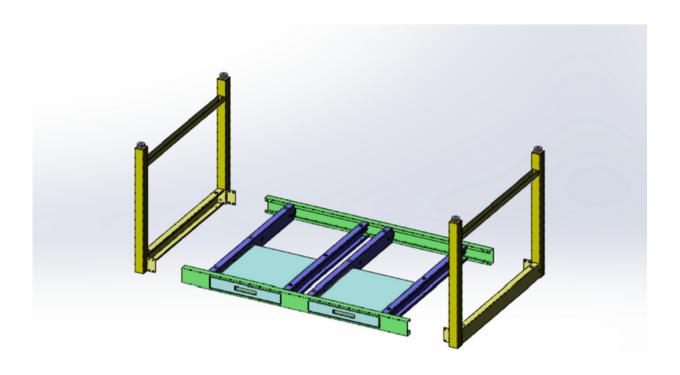


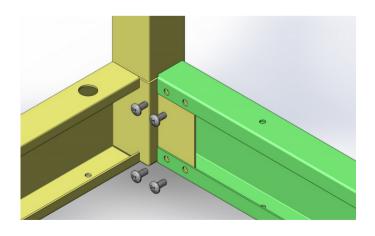



STEP 2.

With the table still upside down, place the back panel in beyween the rear legs of the table, ensuring that the top of the panel (the long side with the single bend) is against the underside of the table frame. Line the panel up with the holes in the apron of the table and screw the panel to the apron with the provided #8 x .375 slef drilling screws using a drill/driver at slow speed.

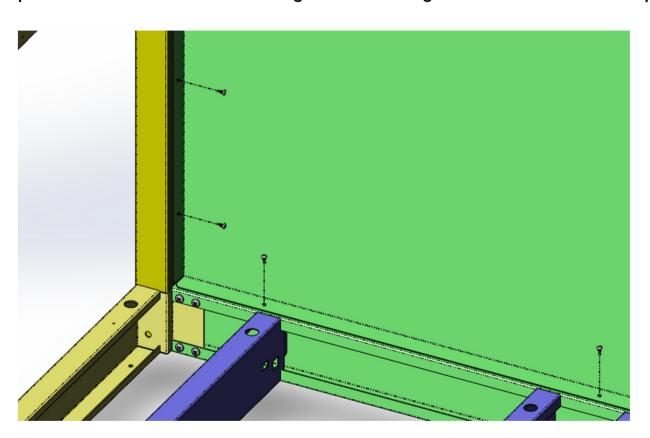



STEP 3.

Secure the sides of the back panel to the legs with the supplied #8 x .375 self drilling screws, ensuring the back panel is straight. Note: The legs DO NOT have pre drilled holes for attaching panel, this is to ensure the panel is aligned with the leg. A drill or driver will be required for this step!


STEP 4.

With the table still upside down, place the side panels between the underside of the apron on the side of the table, and the lower support on the legs. Use the supplied #8 x .375 self drilling screws through the pre drilled holes into the apron and lower support to sceure the panel, repeat for the opposite side panel.



STEP 5.

Flip the table over onto it's feet (please use care as table assembly is heavy) and level the table using the threaded levelers. Once this is complete, place a bead of construction adhesive along the top of the table frame, and gently lower the top onto the table, ensuring it is pressed down firmly for proper adhesion. When assembled the table should have 2 inches of overhang over the frame on all for sides on the top.

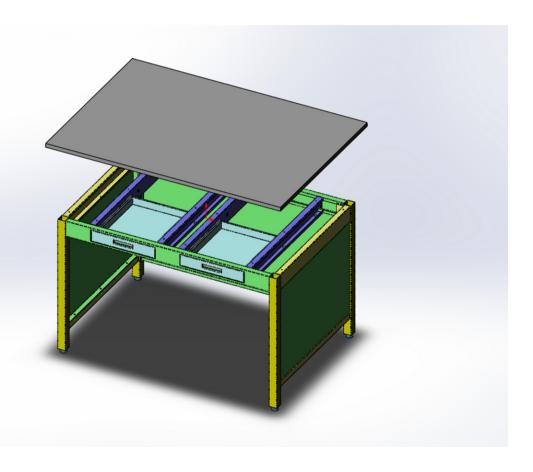



CONTACT INFORMATION

For any questions or concerns contact us

(866) 612 -7312 info@onepointesolutions.com 1112 Swenson Blvd. Elgin, Texas 78621

