

ONEPOINTE SOLUTIONS

PRESENTS

PRODUCT INSTRUCTIONS



HOW TO GUIDES TO SUCCESSFULLY AND EFFICIENTLY
INSTALL OUR PRODUCTS

TABLE SET



TABLE SET

TABLE OF CONTENTS

UPRIGHT INSTRUCTIONS	2
SHELF.....	6
OVERHEAD LIGHTING KIT.....	10
7 FLEX ON UPRIGHTS.....	14
ROLLER BAR ASSEMBLY.....	19
BIN RAIL.....	22
POWER STRIP RAIL	24



TABLE SET UPRIGHT INSTRUCTIONS

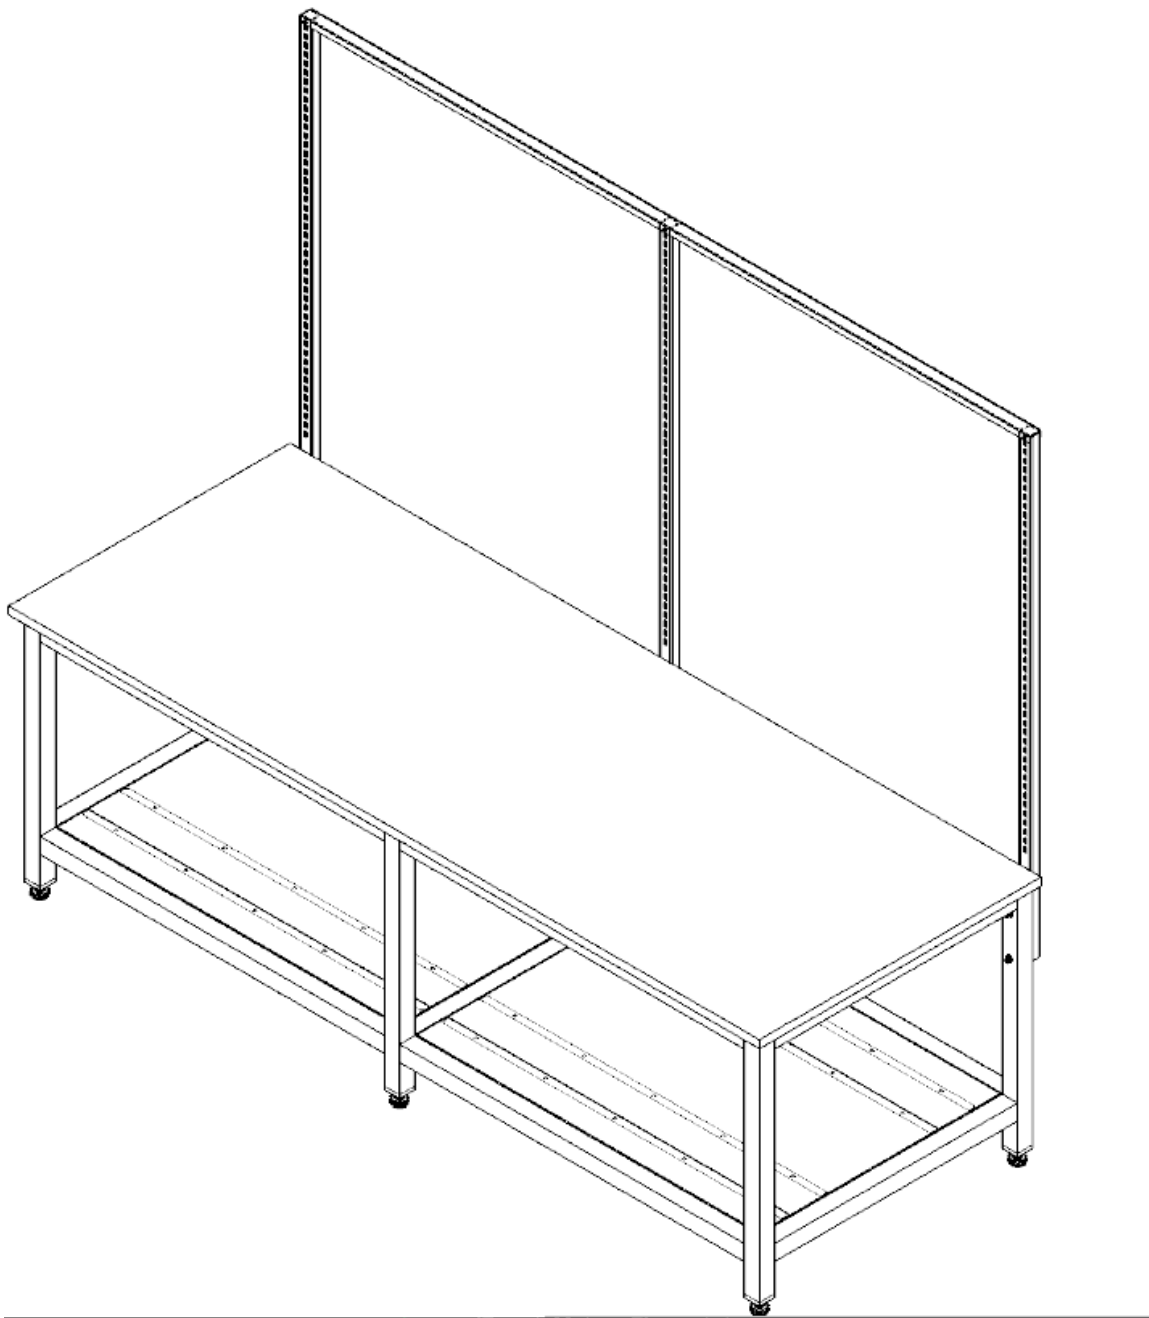

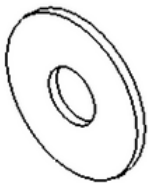
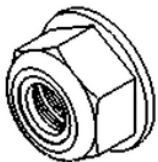
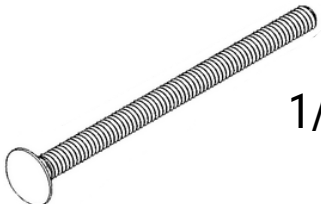


TABLE SET UPRIGHT INSTRUCTIONS

PROVIDED HARDWARE

		3 UPRIGHTS	2 UPRIGHTS
1.	 #8 SELF DRILLING SCREW	QTY 6	QTY 4
2.	 1/4 INCH ID WASHER	QTY 6	QTY 4
3.	 1/4-20 NYLON LOCK NUT	QTY 6	QTY 4
4.	 1/4-20 CARRIAGE BOLT	QTY 6	QTY 4

NECESSARY TOOLS

Drill or impact driver with #2 Phillips head
7/16 wrench or socket



TABLE SET UPRIGHT INSTRUCTIONS

STEP 1: ATTACHING UPRIGHT

1. With upright facing forward, align holes in upright with holes in bench.
2. Slide carriage bolt through from the back.
3. Place washer over the protruding bolt.
4. Thread nut onto bolt. Using 7/16 wrench tighten till "hand tight"
5. Repeat steps 1-4 till all uprights are in place.


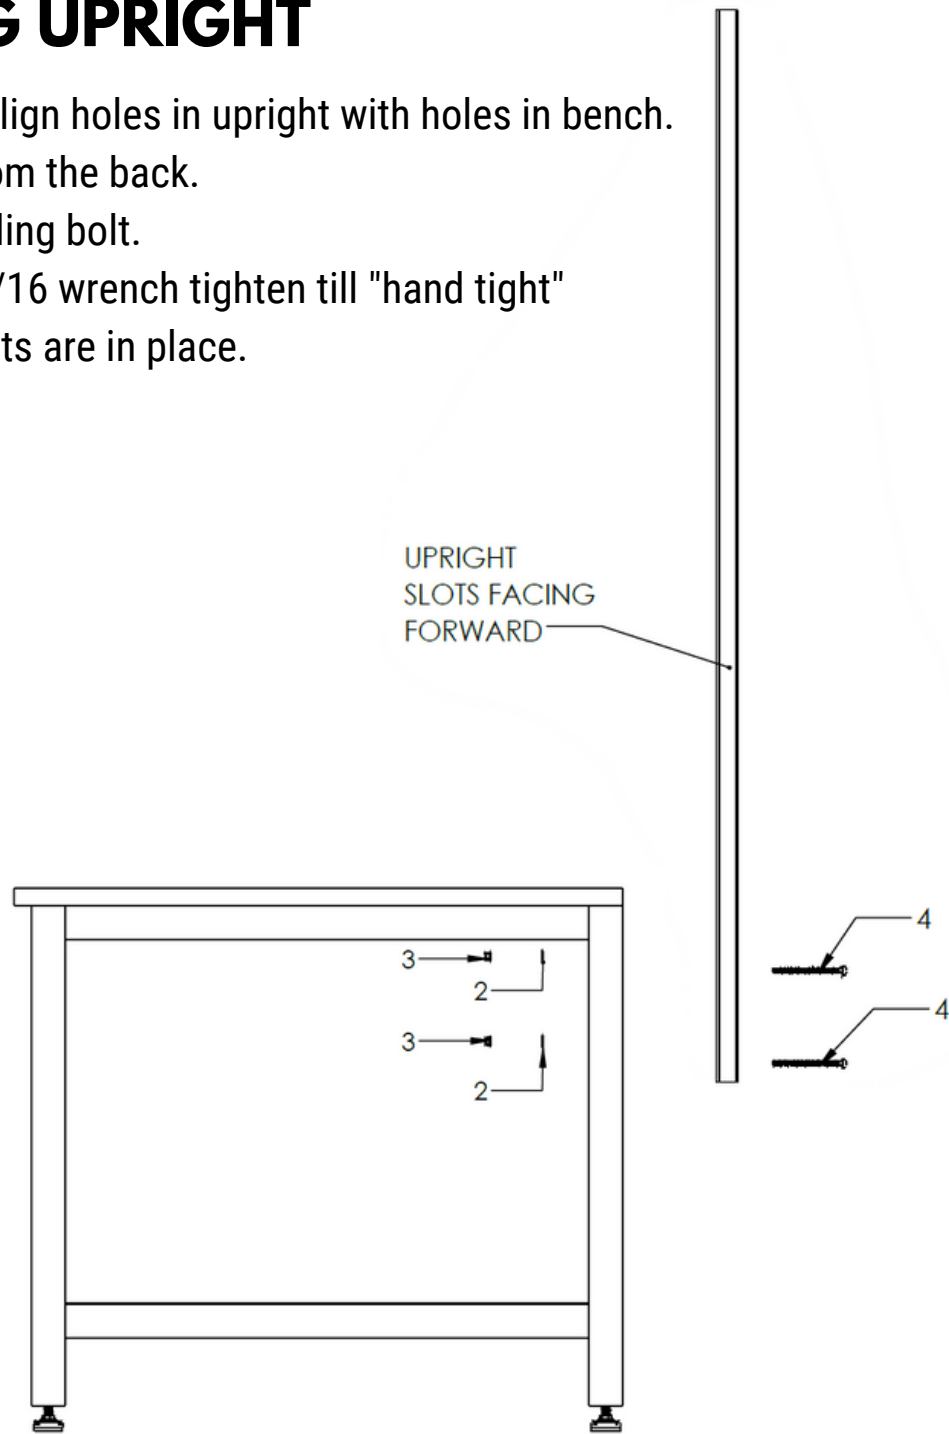


TABLE SET UPRIGHT INSTRUCTIONS

STEP 2: ATTACHING TOP CHANNEL

1. Place top channel onto top of uprights.
2. one upright at a time line up holes in top channel with upright.
3. Secure with self drilling screws using a #2 philips
4. Repeat 2 and 3 untill all screws have been secured.

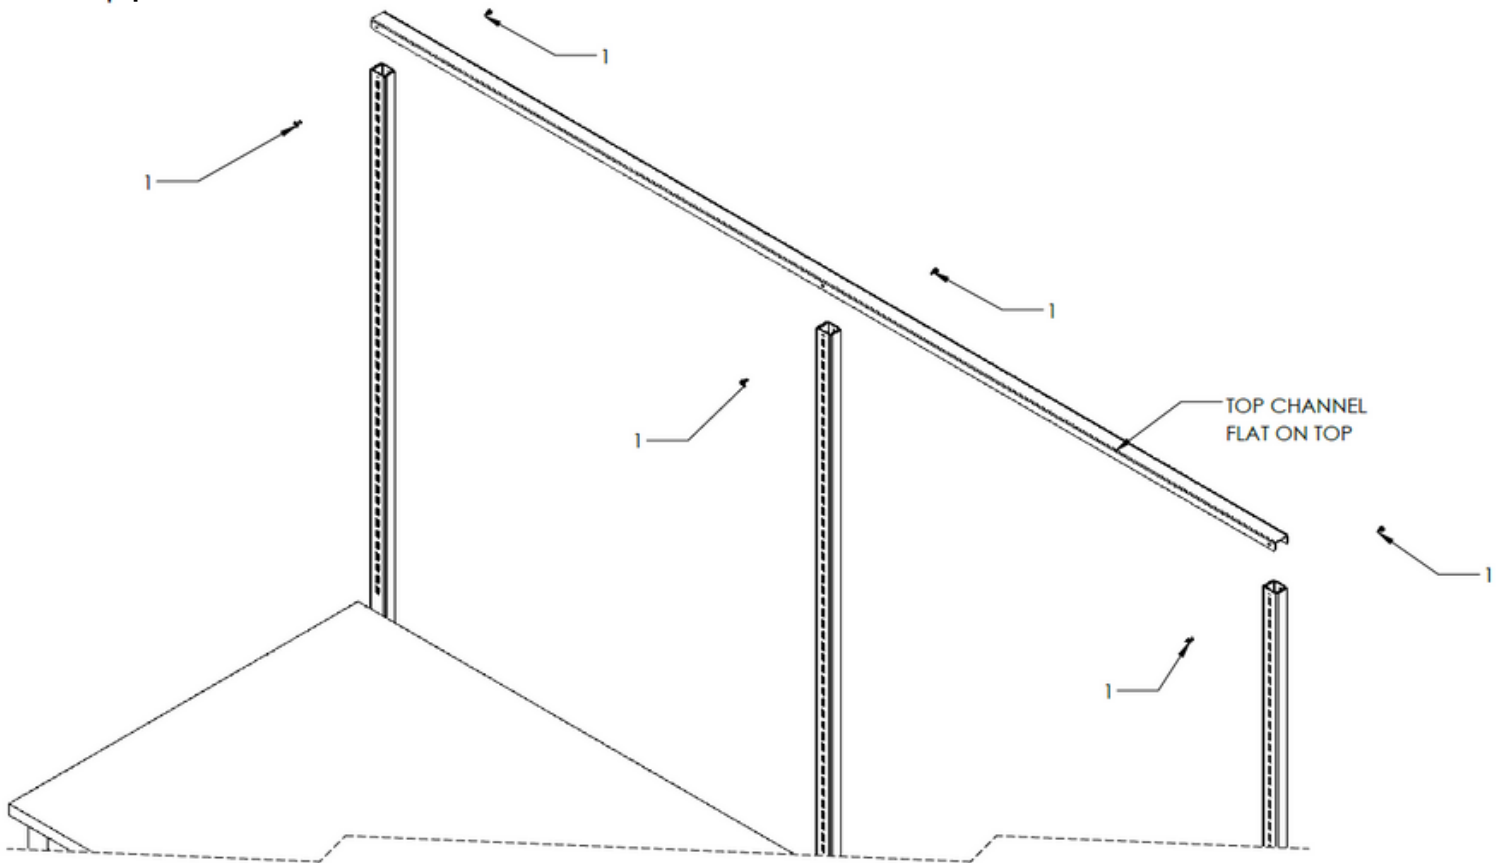

STEP 3: TIGHTEN

1. Once the top channel has been secured, go back and tighten the upright bolts.
2. Now that this is complete move the table to its final position.
3. Your table is now ready for your chosen accesories to be added.



TABLE SET SHELF INSTRUCTIONS



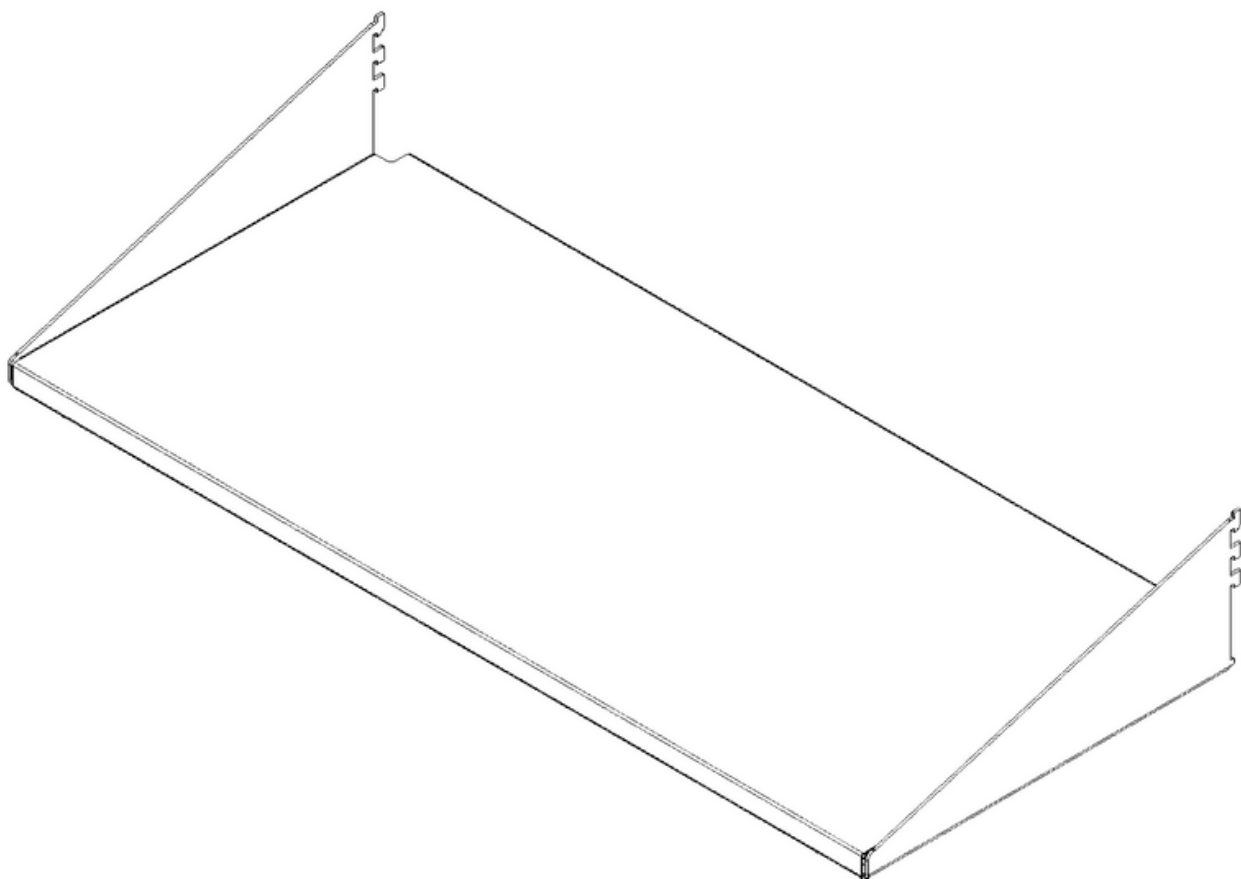


TABLE SET SHELF INSTRUCTIONS


COMPONENTS

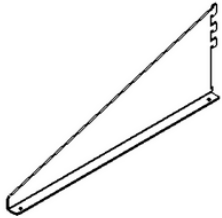

SHELF BRACKET LEFT
QTY 1/SHELF

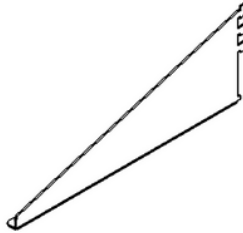

SHELF BRACKET RIGHT
QTY 1/SHELF

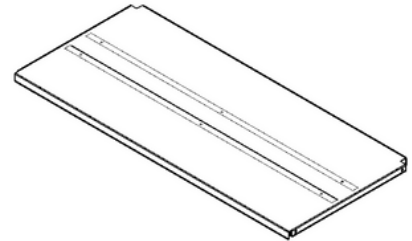

SHELF
QTY 1/SHELF

PROVIDED HARDWARE

1.



#8 SELF DRILLING SCREW

QTY 6

QTY 4

NECESSARY TOOLS

Drill or impact driver with #2 Phillips head



TABLE SET SHELF INSTRUCTIONS

ASSEMBLY

1. Place shelf bracket under shelf
2. Line up holes in bracket with the ones in the shelf
3. Secure with self drilling screws



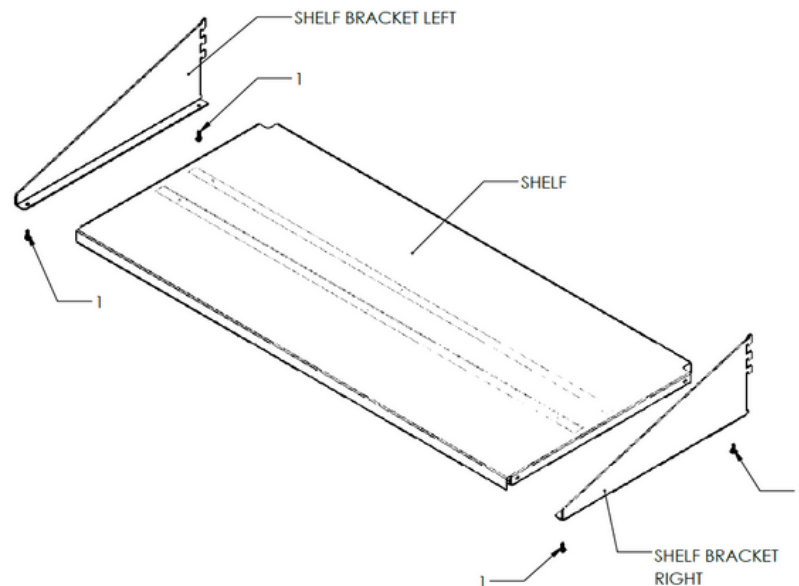


TABLE SET SHELF INSTRUCTIONS

INSTALLATION

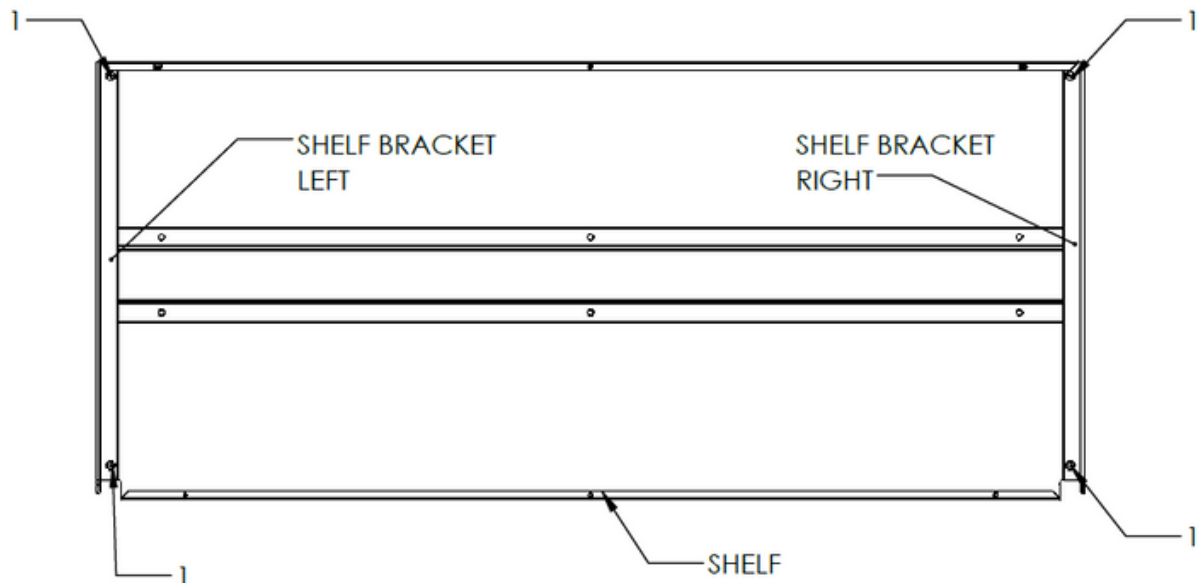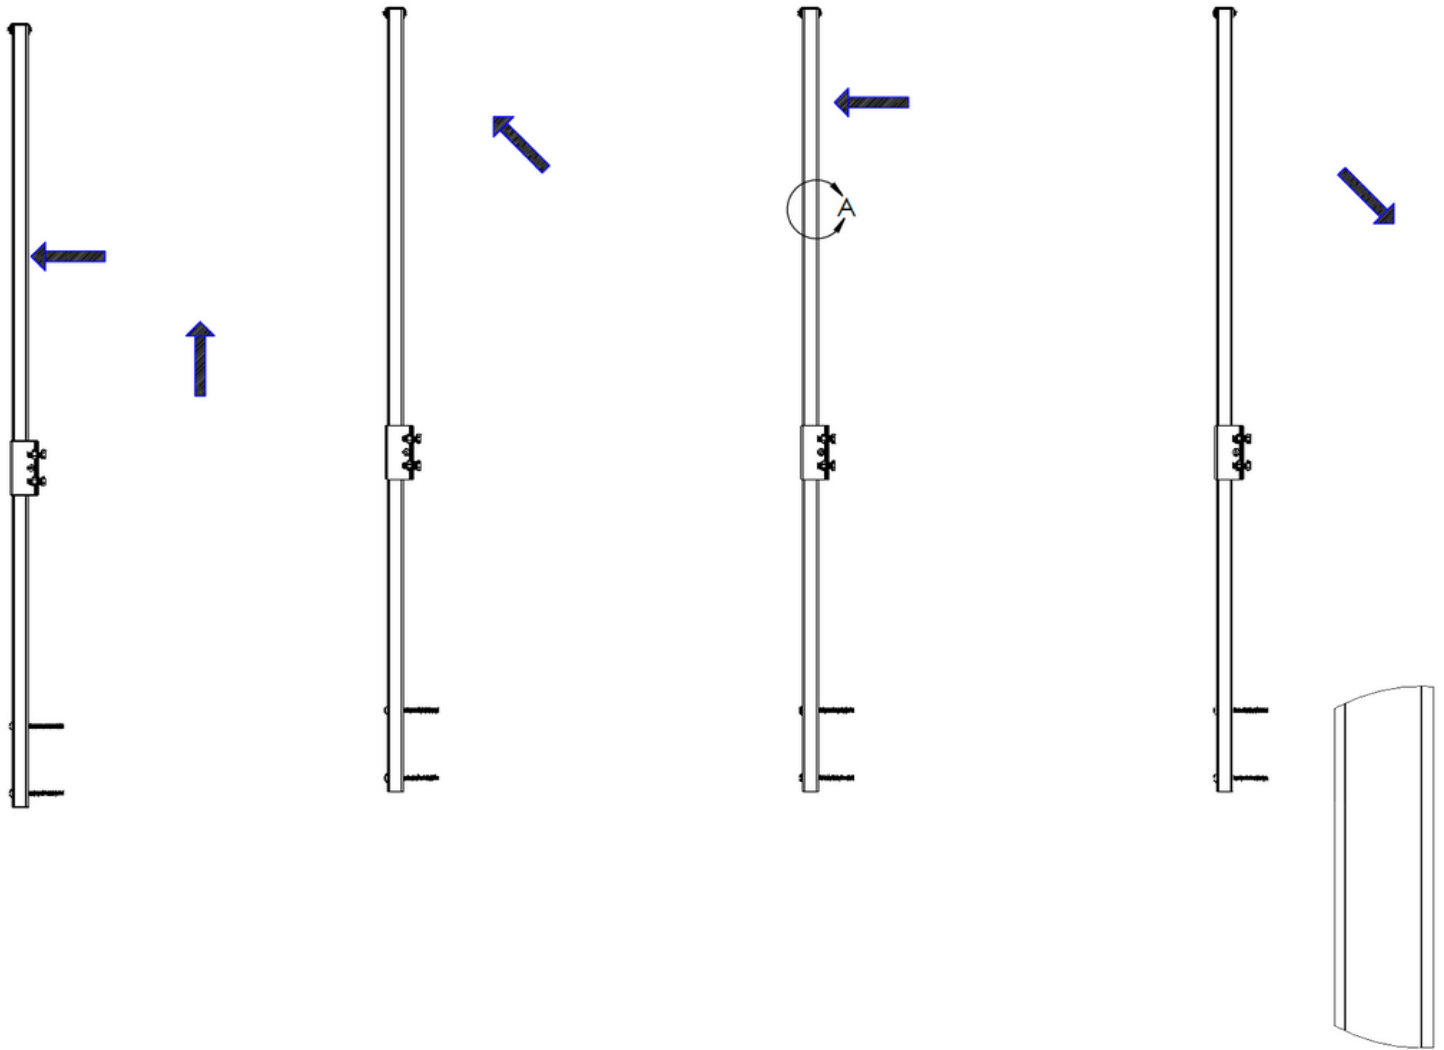

To install shelf tilt and slide top hook into desired notch while pressing inward hinge the shelf down. When flat ensure that all hooks have slid completely into the notch.



TABLE SET OVERHEAD LIGHTING INSTRUCTIONS



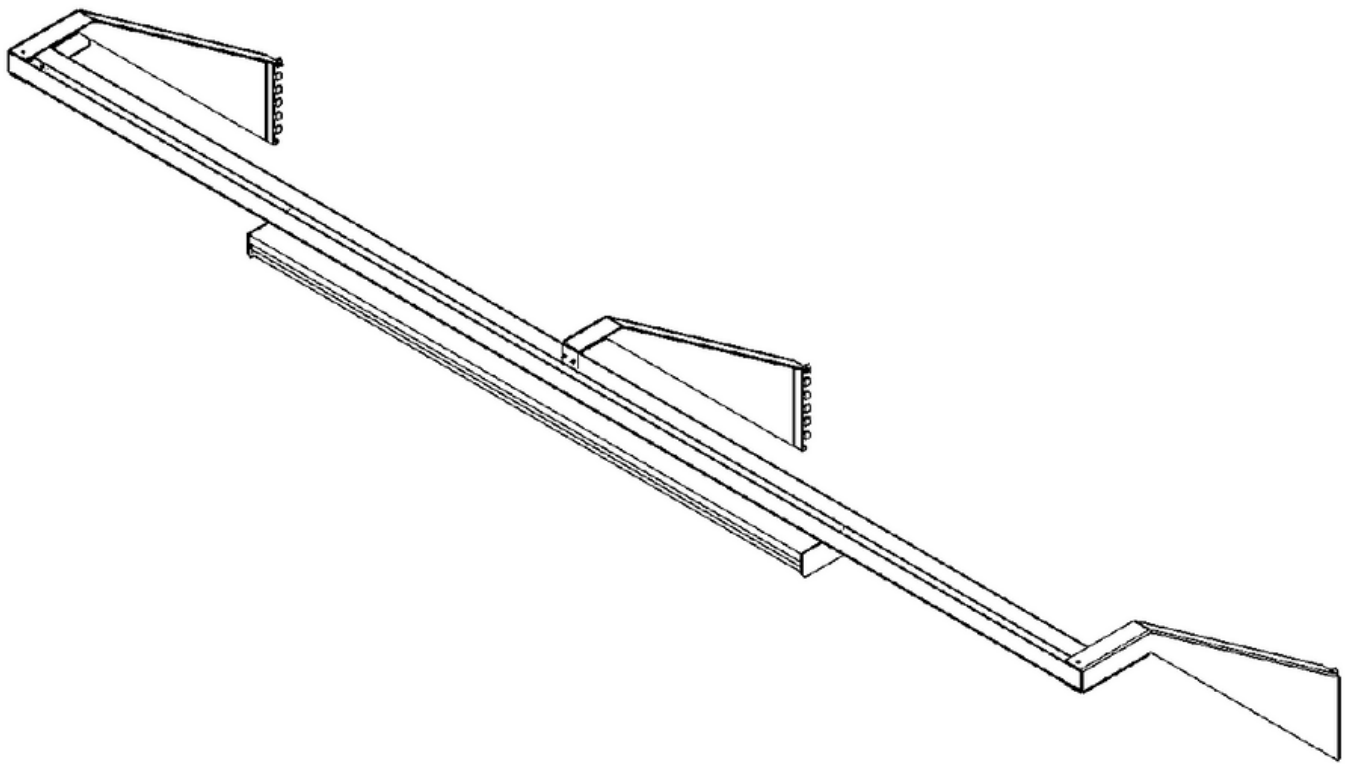


TABLE SET OVERHEAD LIGHTING INSTRUCTIONS


COMPONENTS

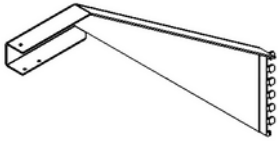


LIGHT BAR
ARM-LEFT
QTY 1

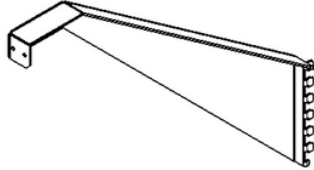

LIGHT BAR
ARM-CENTER
QTY 1

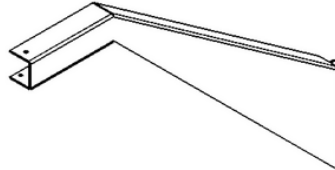


LIGHT BAR
ARM-RIGHT
QTY 1

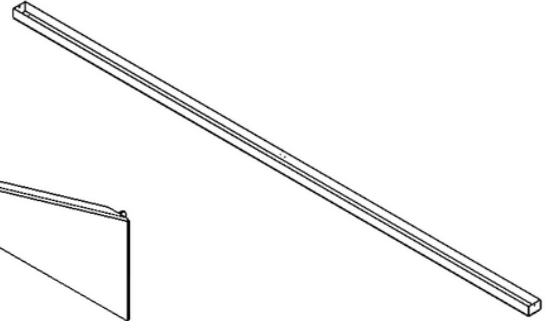

LIGHT BAR
QTY 1

PROVIDED HARDWARE

		2 UPRIGHTS	3 UPRIGHTS
1.	 #8 SELF DRILLING SCREW	QTY 4	QTY 6

NECESSARY TOOLS

Drill or impact driver with #2 Phillips head



TABLE SET OVERHEAD LIGHTING INSTRUCTIONS

ASSEMBLY

1. Slide light bar into the left arm
2. Line up holes in the arm with the ones in the bar.
3. Secure with self drilling screws.
4. Repeat for the right arm.
5. If your bench has a third upright, line up the holes in the center of the light bar with those in the center arm
6. Secure with self drilling screws.


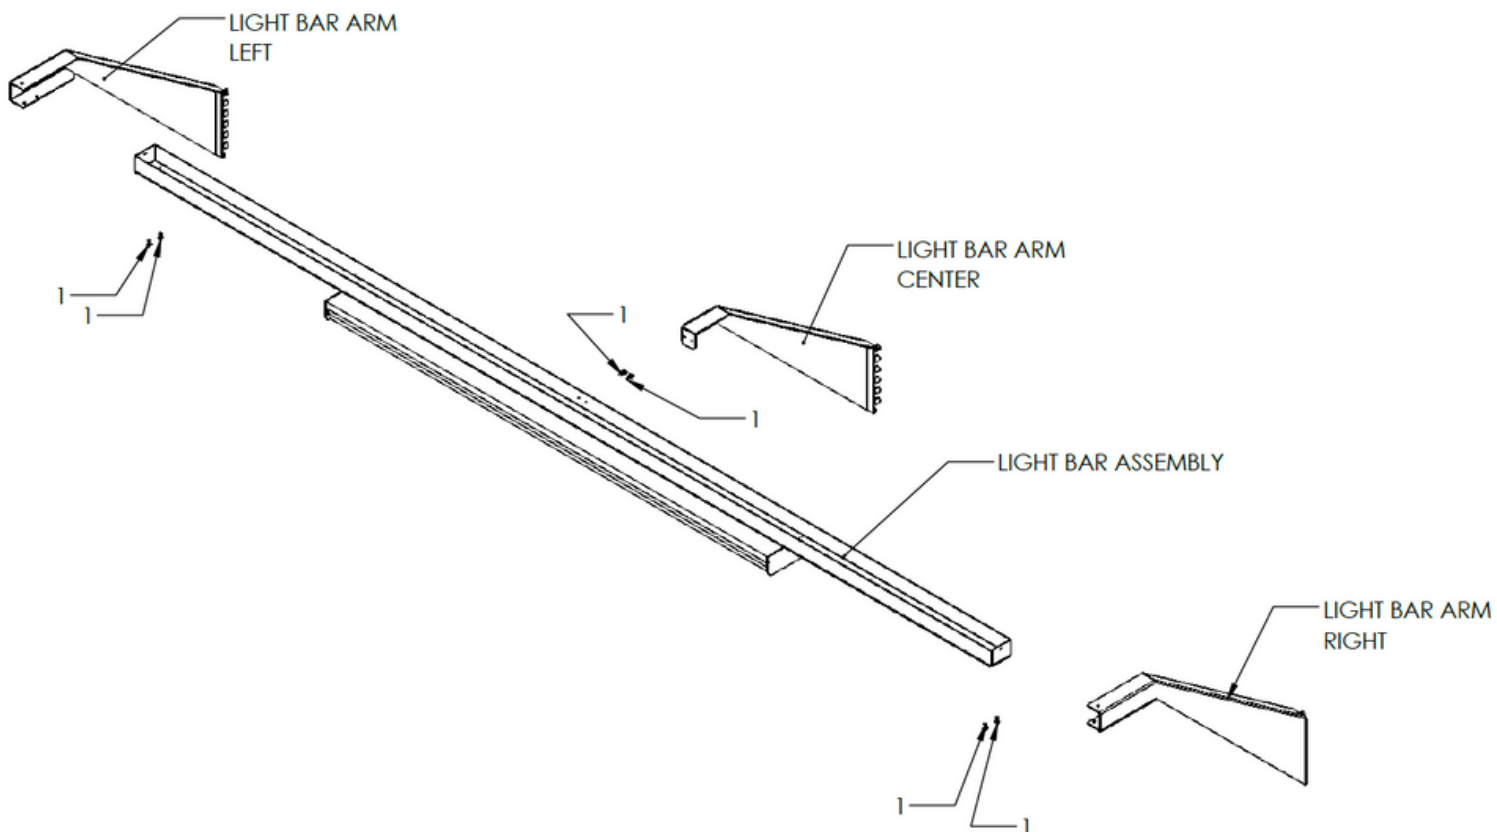


TABLE SET OVERHEAD LIGHTING INSTRUCTIONS

INSTALLATION

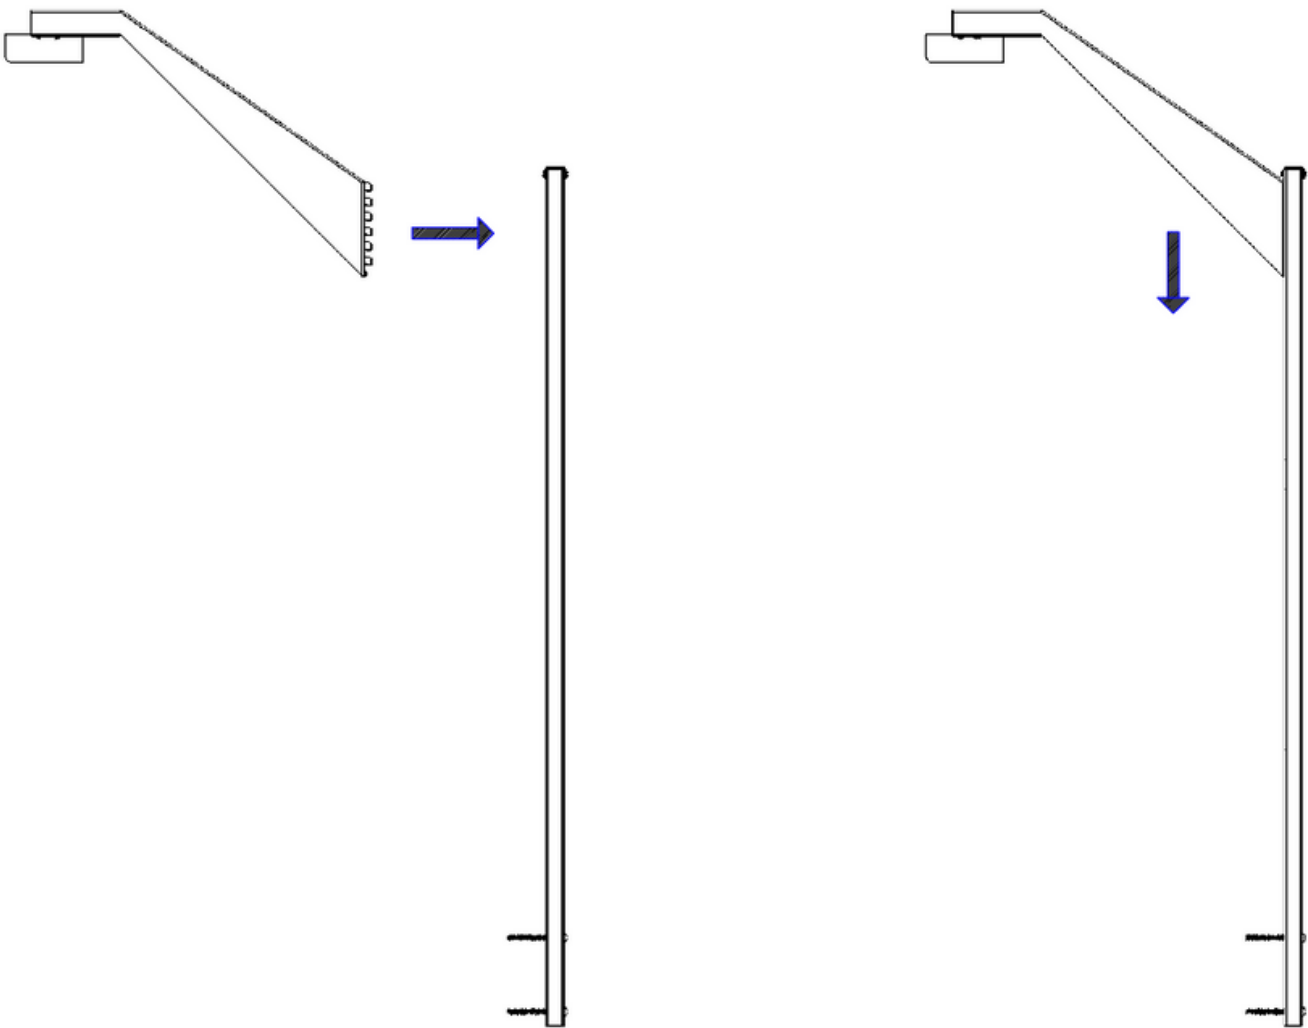

Place hooks into slots and slide down, ensuring full engagement of hooks.



TABLE SET 7 FLEX ON UPRIGHTS


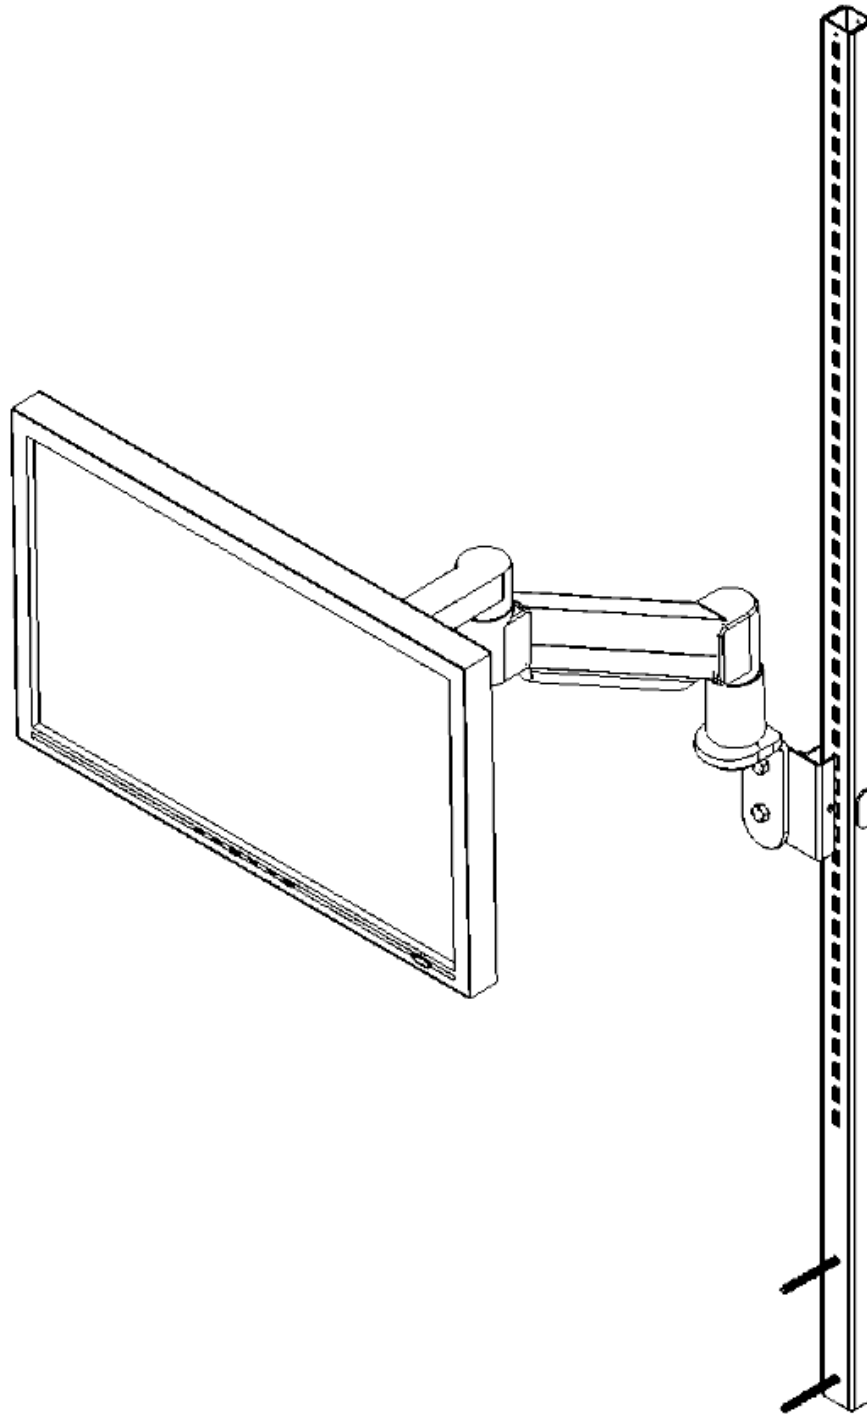



TABLE SET 7 FLEX ON UPRIGHTS

COMPONENTS

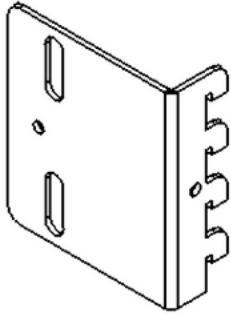


7 FLEX MOUNT PLATE

QTY 1

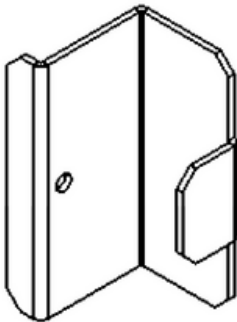

7 FLEX MOUNT CLAMP

QTY 1

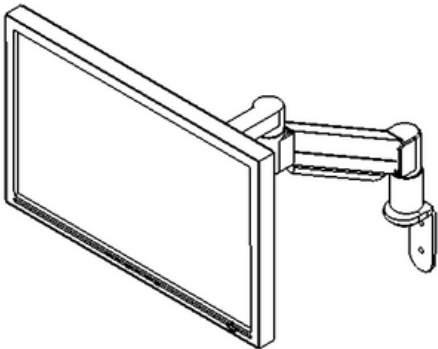



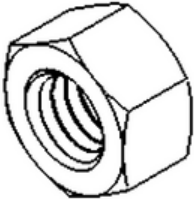
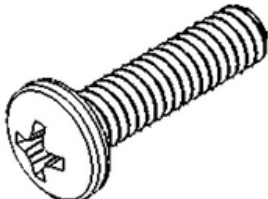
7 FLEX

QTY 1



TABLE SET 7 FLEX ON UPRIGHTS

PROVIDED HARDWARE

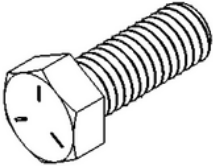- | | | | |
|----|---|--|-------|
| 1. |  | 3/8 HEX HEAD BOLT | QTY 2 |
| 2. |  | 3/8 WASHER | QTY 2 |
| 3. |  | 3/8 NUT | QTY 2 |
| 4. |  | 1/4-20 PHILLIPS HEAD
BOLT (PRE-INSTALLED) | QTY 1 |

NECESSARY TOOLS

Drill or impact driver with #2 Phillips head
(2) 9/16" wrenches or rachets



TABLE SET 7 FLEX ON UPRIGHTS

ASSEMBLY DIAGRAM

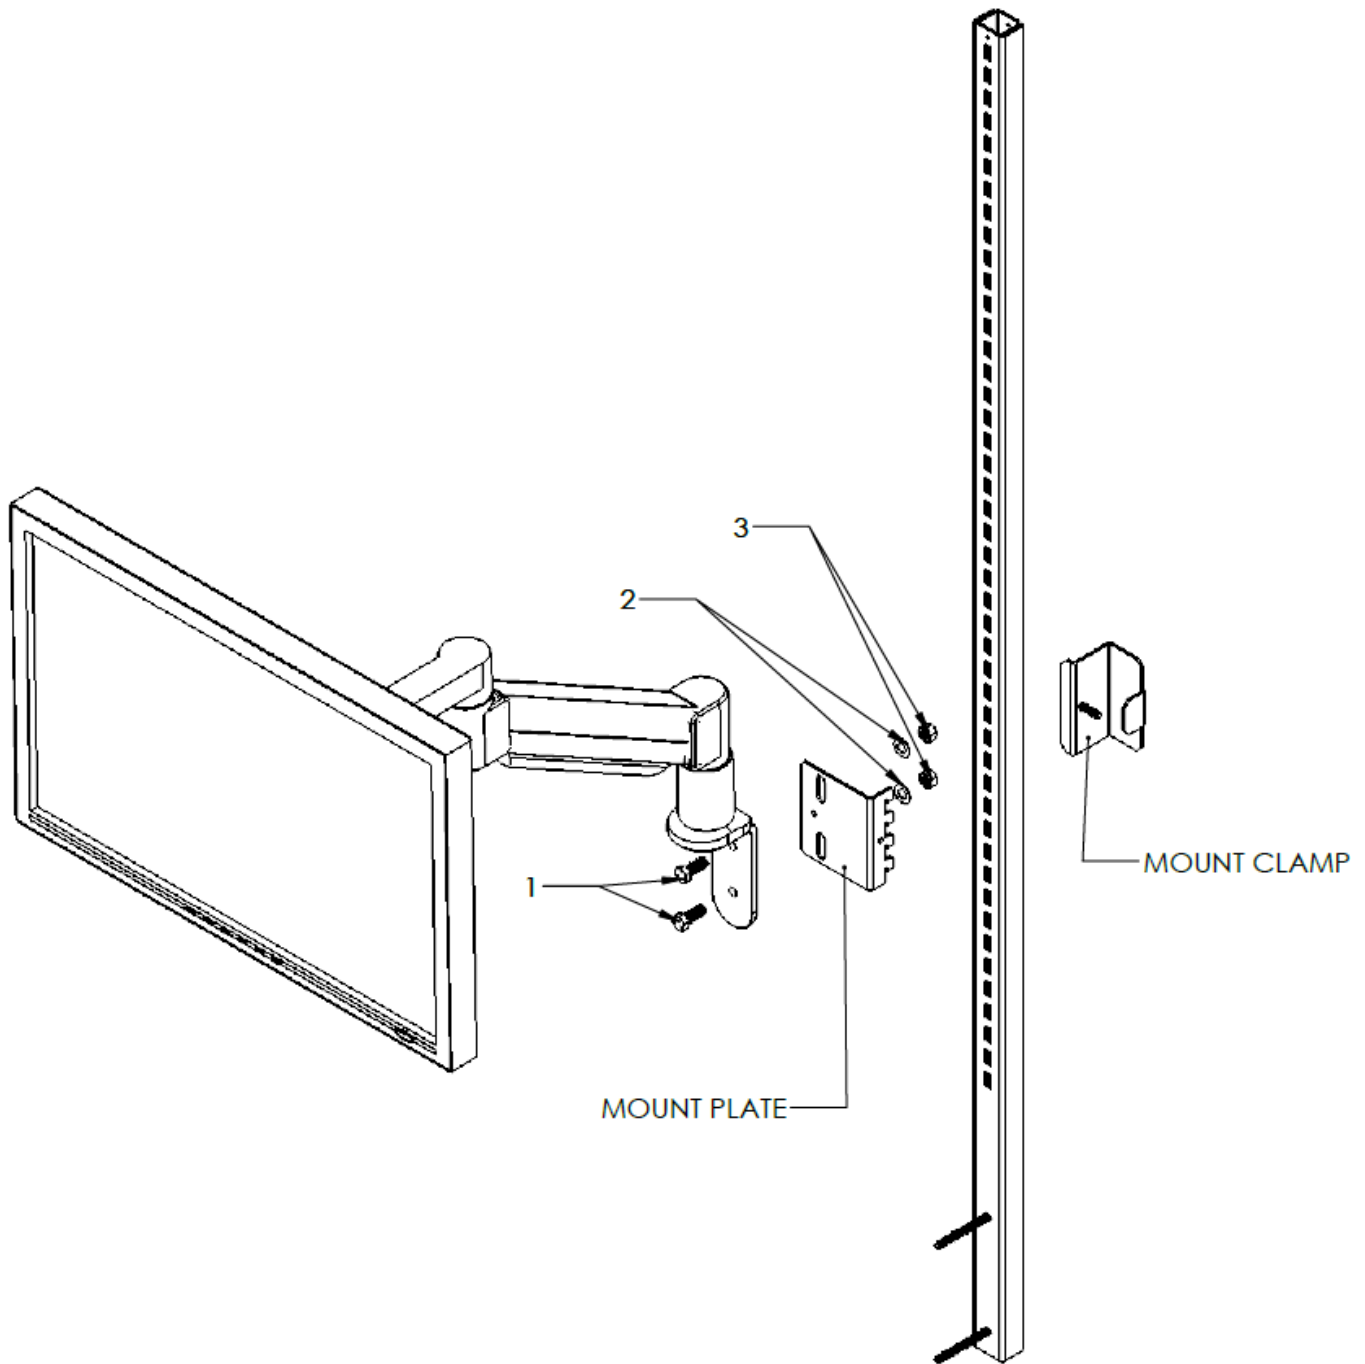


TABLE SET 7 FLEX ON UPRIGHTS

INSTALLATION

1. Place mount clamp around back of upright.
2. Hook the mount plate into the front of the upright.
3. Align the bolt in the mount clamp with the threaded hole in the mount plate.
4. Thread the 1/4 -20 in until it is tight.
5. To mount the 7 flex align holes in mount bracket with the holes in the mount plate.
6. Slide 3/8 bolt through placing a washer and nut on the back side.

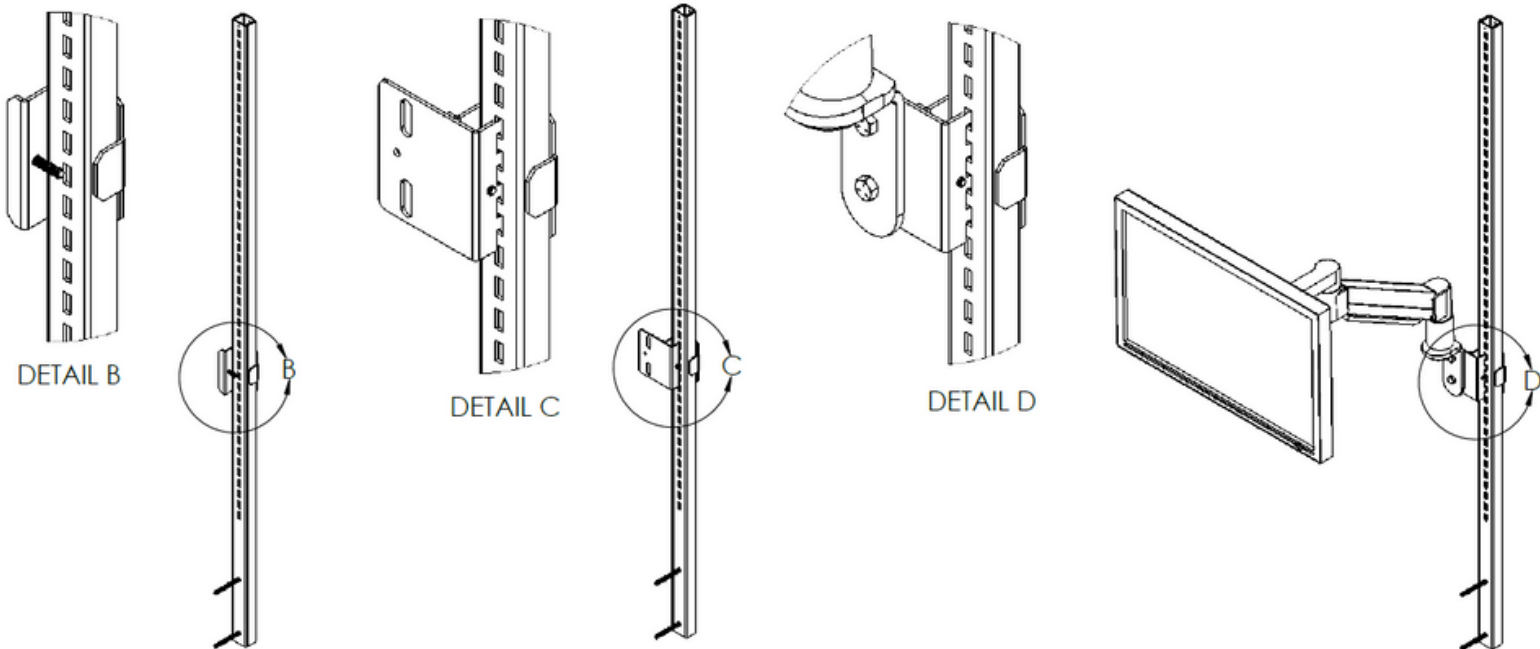


TABLE SET ROLLER BAR ASSEMBLY


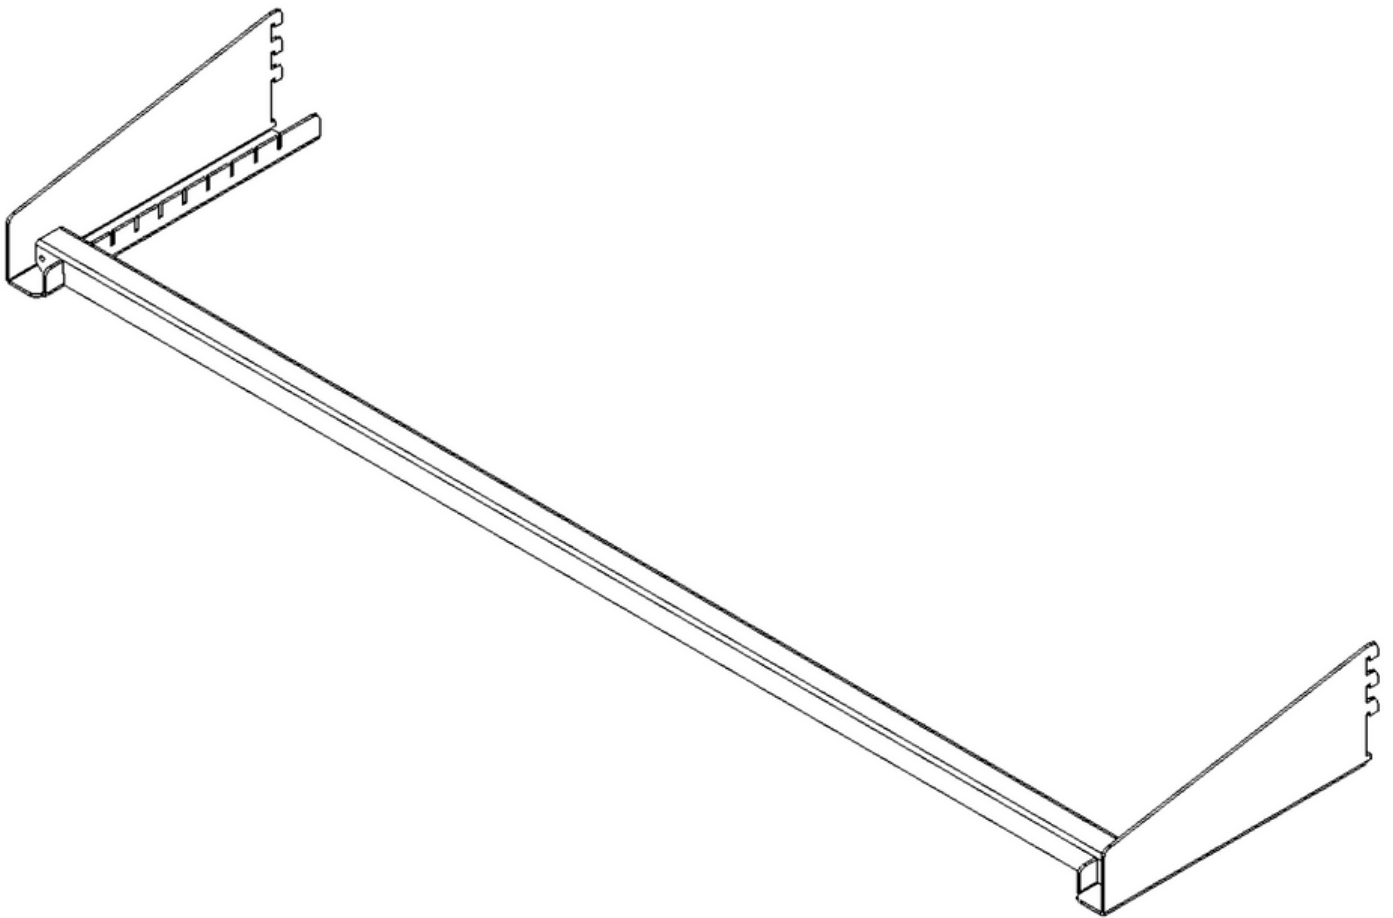



TABLE SET ROLLER BAR ASSEMBLY

COMPONENTS

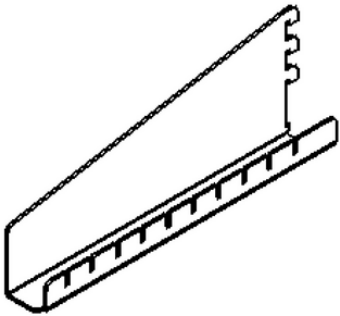


ROLLER BAR BRACKET LEFT

QTY 1

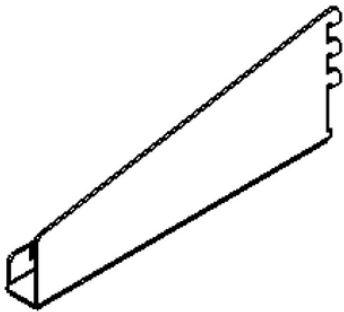

ROLLER BAR BRACKET RIGHT

QTY 1

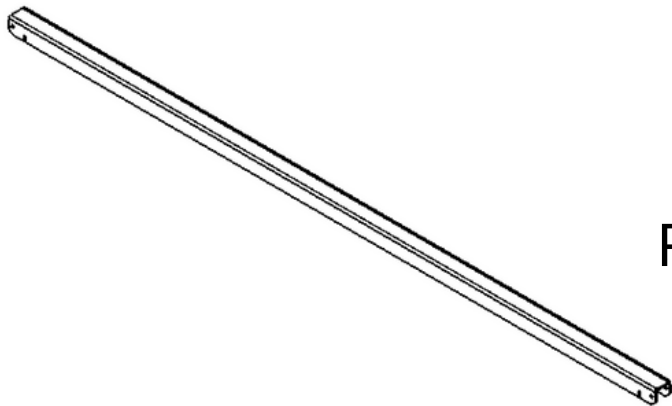

ROLLER BAR

QTY 1



TABLE SET ROLLER BAR ASSEMBLY

INSTALLATION

1. Hook the roller bar brackets onto the upright left and right, making sure they are on the same level.
2. Slip the notches of the roller bar over the brackets.

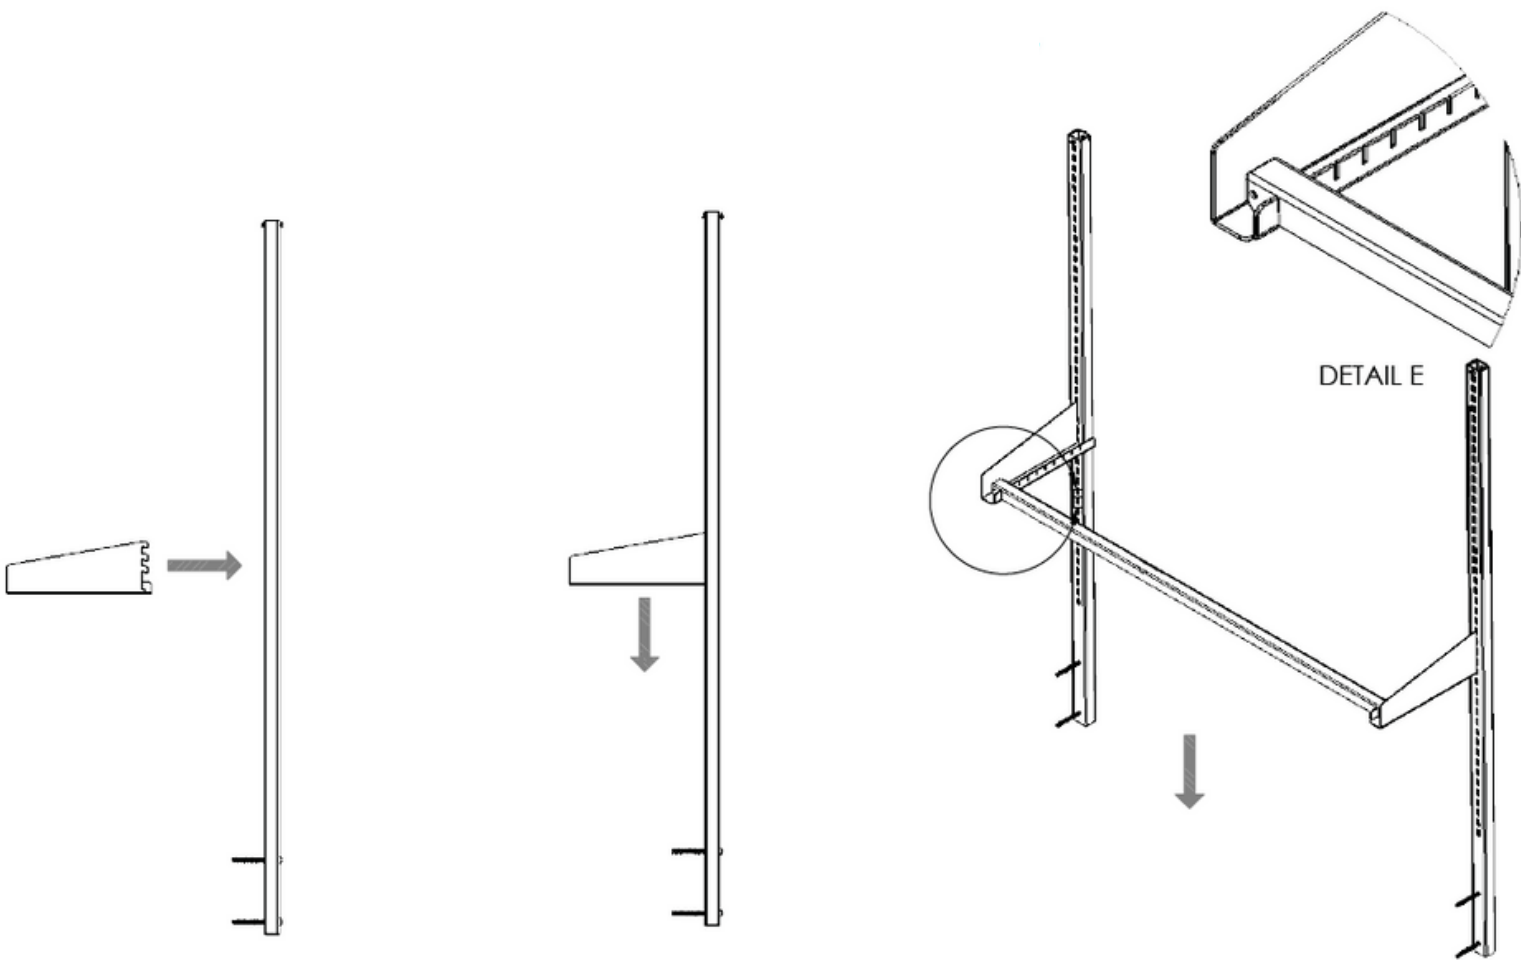


TABLE SET BIN RAIL

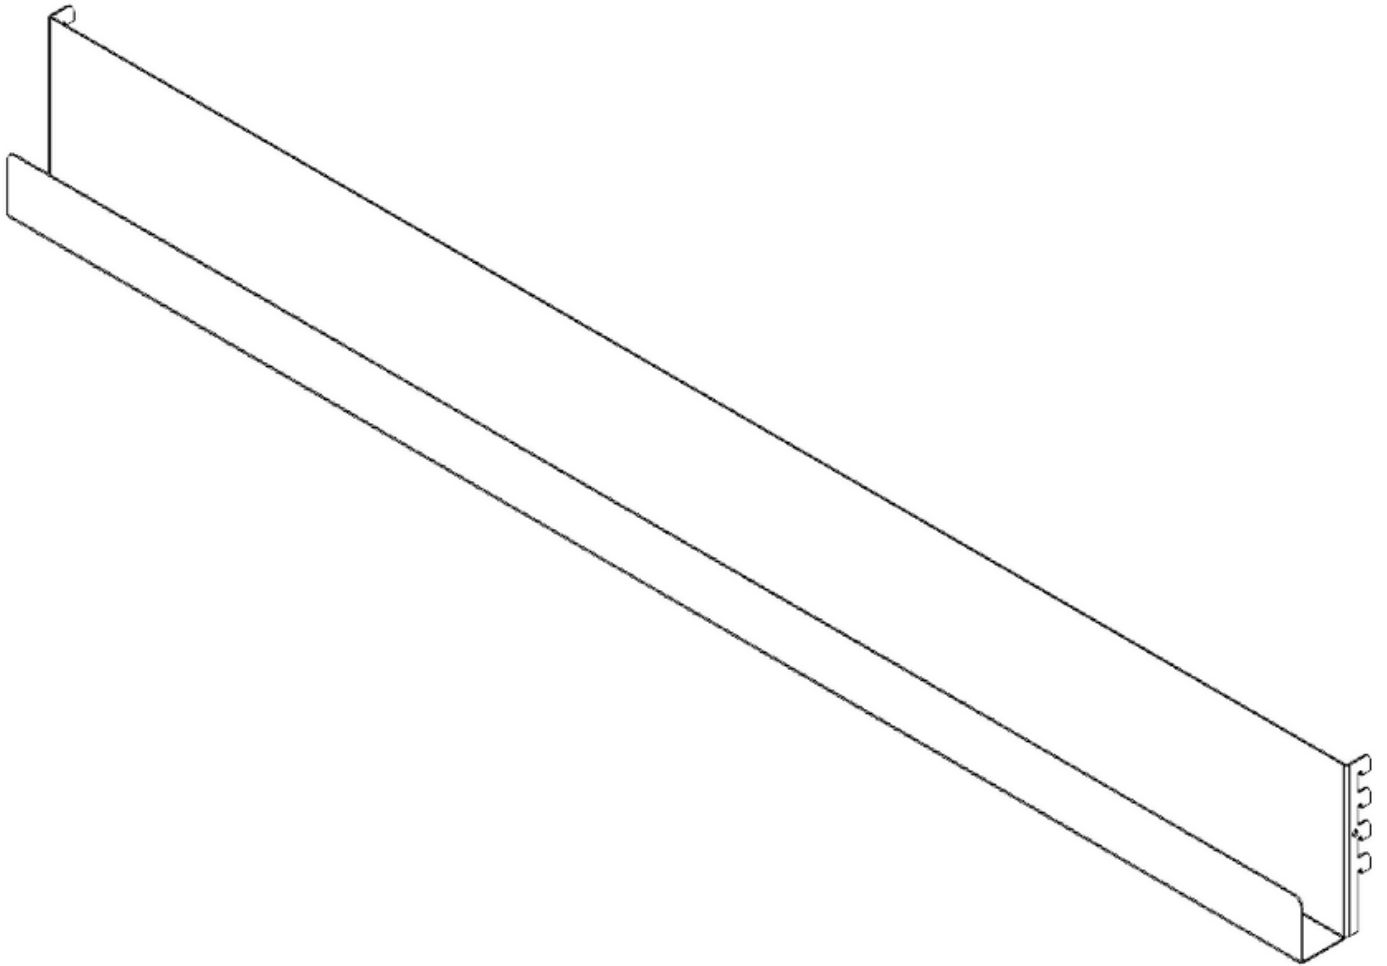


TABLE SET BIN RAIL

INSTALLATION

1. Insert the bin rail into the slots on the upright, ensuring even height on both sides
2. Slide down on rail to ensure full engagement of the hooks before attaching any bins to the bin rail.

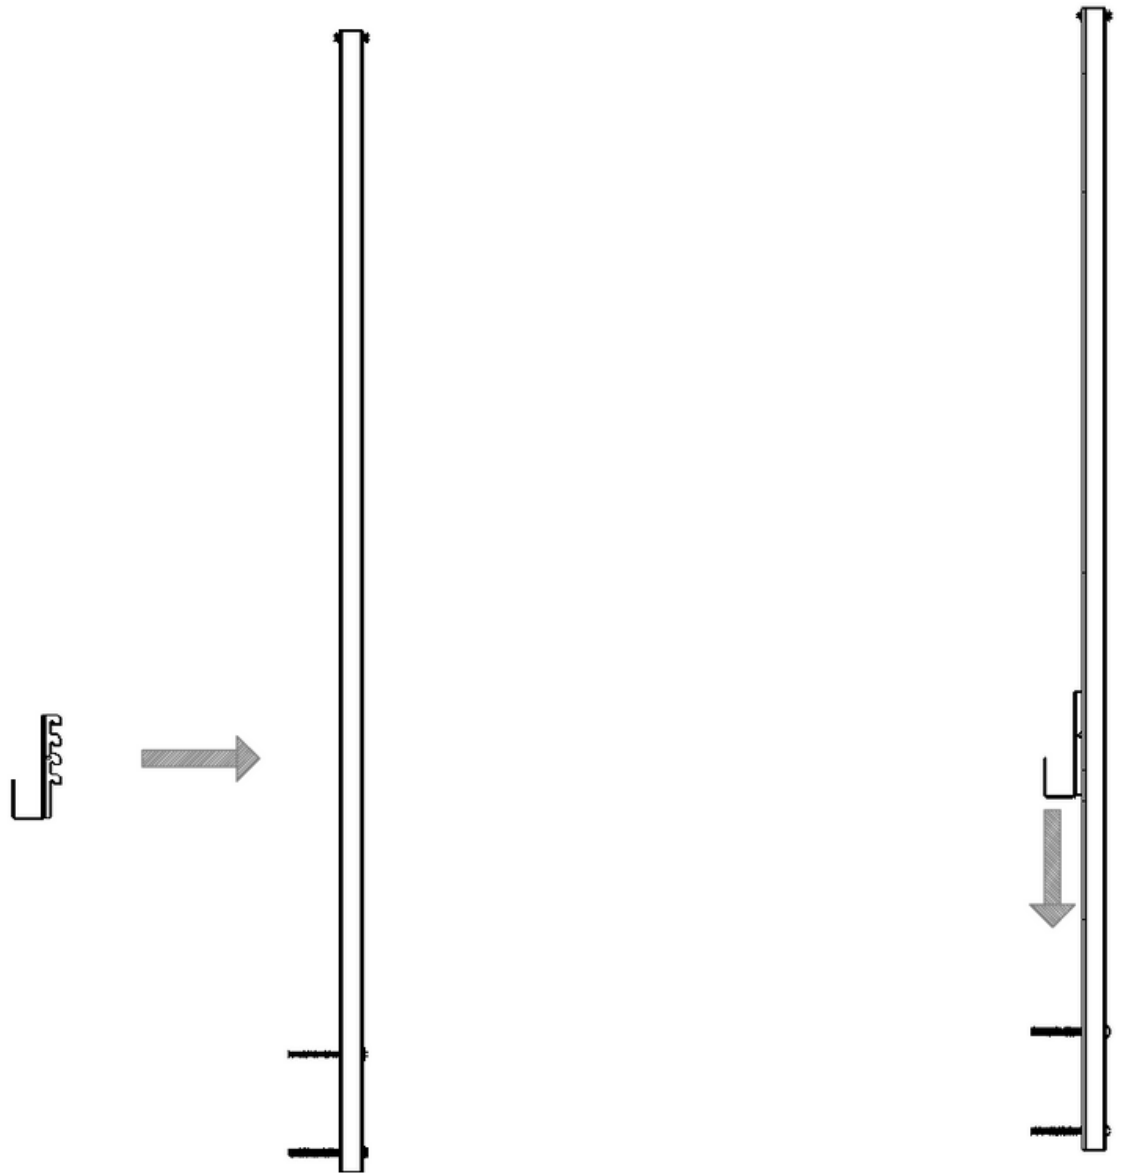


TABLE SET POWERSTRIP BAR


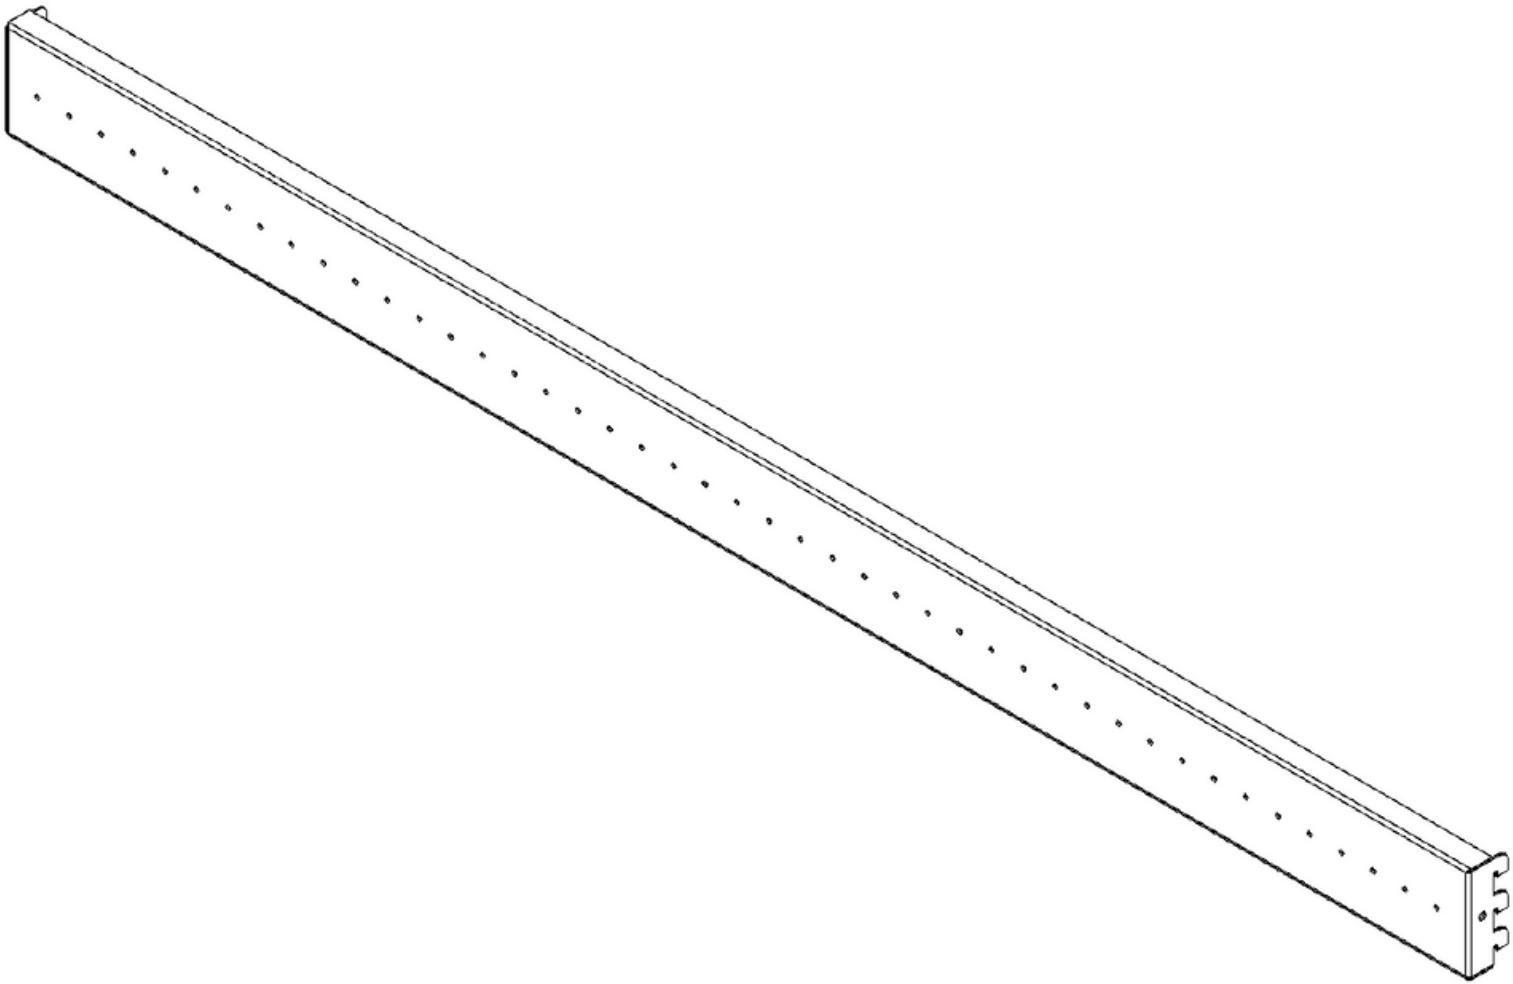


TABLE SET POWERSTRIP BAR

INSTALLATION

1. Insert the powerstrip into the slots on the upright, ensuring even height on both sides
2. Slide down on rail to ensure full engagement of the hooks before attaching any bins to the powerstrip.

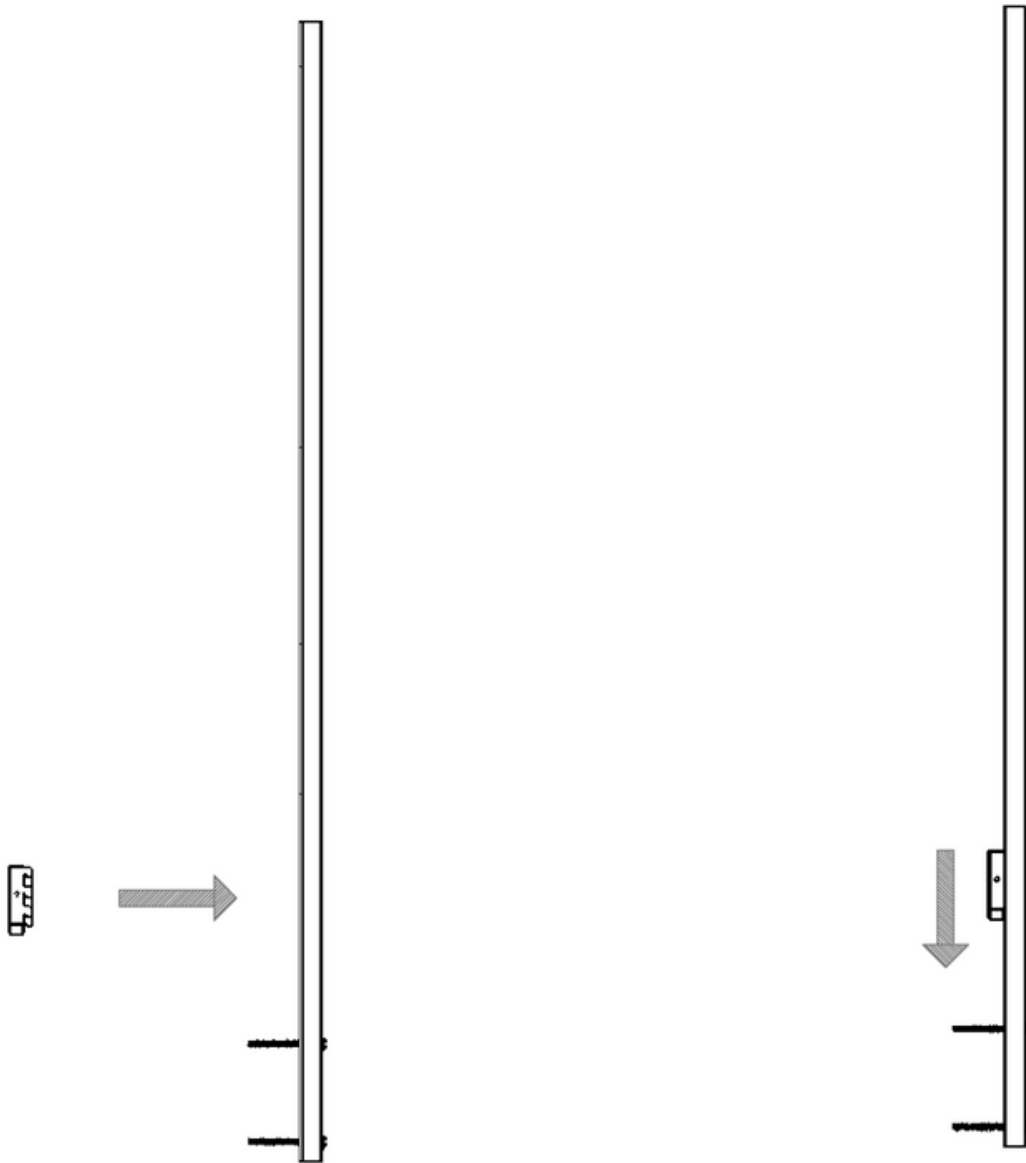

CONTACT INFORMATION

For any questions or concerns contact us

(866) 612-7312

info@onepointesolutions.com

1112 Swenson Blvd.

Elgin, Texas 78621

